

# Installation / Monitoring Technique

# **VARIMETER IMD Insulation Monitor** IN 5880/710. IN 5880/711. IP 5880/711



### **Circuit Diagrams**

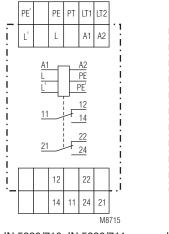

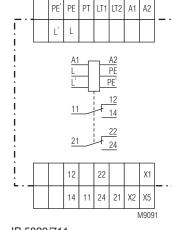

According to IEC/EN 60 255, DIN VDE 0435-303, IEC/EN 61 557-8 • For rooms used for medical purposes

- according to IEC 60364-7-710, DIN VDE 0100-710 For three-phase and A.C. power systems with 0 ... 500 V
- and 10 ... 1000 Hz (IT power systems)
- Adjustable alarm value for ground fault  $R_{_{Al}}$  of 50  $\dots$  500  $k\Omega$
- Measuring circuit with broken wire protection
- As option, programmable for storing or non-storing of errors
- With reset and test button
- Additional external reset and test buttons can be connected
- LED indicators for operation, insulation fault, and interruption of Measuring circuit
- 2 changeover contacts
- As option, with LED chain for indication of the current insulation status
- 52.5 mm width

#### Approvals and Markings



#### Application

1

For insulation monitoring of the IT system of rooms used for medical purposes according to VDE 0100-710:

#### **Design and Method of Functioning**

The terminals L/L' and PE/PE' are connected to the respective lines of the IT power system. If the IT transformer has a centre tapping or a star point, the terminals L / L' are preferably connected to this point. The terminals L' and PE' should be connected with separate lines and possibly not in the same place (at least not at the same terminal) of the IT power system to

allow for safe recognition of an interruption in the measuring circle.

The insulation resistance of the IT power system against ground is measured between the terminals L / L' and PE / PE'. If the ground fault resistance  $R_{_{\rm F}}$ falls below the pickup value  $\mathbf{R}_{_{AL}}$  of the line isolation monitor, the red LED "AL" will be illuminated, and the two changeover contacts fall back into normal position. On interruption of the Measuring circuit, the two changeover contacts will likewise fall back into normal position, and the red LED "MK" will be illuminated.

After correction of the error (R<sub>E</sub> > R<sub>AL</sub>, Measuring circuit connected) and jumpered terminals LT1 - LT2 (= error not stored), the changeover contacts will change into work position (correct status), and the red error LEDs will stop lighting.

If you wish to store errors, remove the jumper LT1 - LT2. In this way, also short-lived errors as e.g. a temporary deterioration of insulation, for example by touching of a line or unreliable contact making in the Measuring circuit may trigger a stored alarm: The output contacts remain open also after the error has been corrected. The type of the error can be seen in retrospect from the illuminated error LED "AL" or "MK".

The error memory can be reset by pressing the internal or external reset key, or by switching off the auxiliary voltage.

By pressing the internal or external "Test" key, a deterioration of insulation is simulated in the Measuring circuit (=  $R_{E}$  approx. 40 k $\Omega$ ); thus, the correct response of the isolation monitor is checked.


The variant IN 5880/711 comprises an 11-stage LED chain for indication of the current insulation resistance of the power system. By means of differently colored LEDs, the insulation status in the range of 20 k $\Omega$  ... 1 M $\Omega$ is indicated. In this way, deterioration of insulation can be detected even before an alarm is triggered.

The variant IP 5880/711 includes a 11 step LED indicator to monitor the actual state of the insulation, an additional power supply and relays to connect a test and indicator unit UP 5862. The width is 70 mm.

IN 5880/710, IN 5880/711

IP 5880/711

### **Function Diagram Insulation Monitoring System**

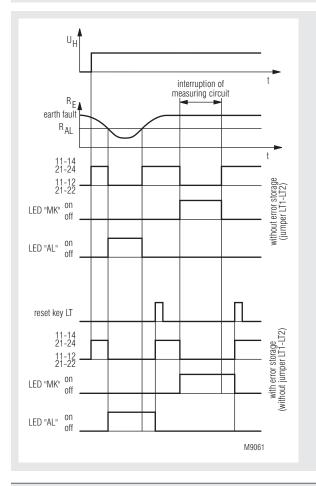

# Notes General

Before checking insulation and voltage of the system, disconnect the monitoring device IN 5880 from the power source.

# Insulation monitoring system

The isolation monitor is designed to monitor straight AC power systems. Any interfering direct voltages getting into the Measuring circuit will not damage the device but will falsify the conditions in the Measuring circuit while they are affecting it. As insulation measuring is performed via direct current, it will not be falsified by system capacitances against protective ground  $C_{e}$ . However, the pickup time may be longer in case of insulation failure, in the order of the time constant  $R_e$  times  $C_e$ . In every IT circuit, only one isolation monitor must be connected.

This has to be observed when coupling voltage system.

## Indicators

Green LED "ON":	is illuminated when auxiliary voltage has been applied (operability)		
Red LED "AL":	is illuminated when an insulation failure is present, $R_{c} < R_{u}$ (value has fallen below alarm level)		
Red LED "MK":	is illuminated when one of the lines of the Measuring circuit is interrupted (L, L', PE, PE')		
With IN 5880/711, additional 11-stage LED chain:			
Green LEDs:	at ≥ 1 MΩ, 750 kΩ, 550 kΩ		
Yellow LEDs:	at 400 kΩ, 300 kΩ, 220 kΩ, 160 kΩ, 110 kΩ, 75 kΩ		

at 40 k $\Omega$ ,  $\leq$  20 k $\Omega$ Red LEDs:

### **Technical Data**

## **Insulation Measuring Circuit**

	10.0
Nominal voltage U <sub>N</sub> :	AC 0 500 V
Voltage range:	0.8 1.1 U <sub>N</sub>
Frequency range: Alarm value R <sub>AL</sub> :	10 1000 Hz, Adjustable from 50 500 kΩ
Internal testing resistor:	corresponds to an $R_F$ of approx. 40 k $\Omega$
AC internal resistance:	$> 250 \text{ k}\Omega$
DC internal resistance:	> 250 k $\Omega$
Measuring voltage:	approx. DC 15 V (generated internally)
Max. measuring current	
(R <sub>F</sub> = 0):	< 50 μΑ
Max. permissible	
interfering direct voltage:	DC 500 V
Operate delay:	with $R_{AL} = 50 \text{ k}\Omega$ , CE = 1 $\mu$ F
$R_{E}$ of $\infty$ to 0.9 $R_{AL}$ :	< 1.3 s
$R_{E}$ of $\infty$ to 0 k $\Omega$ :	< 0.7 s
Hysteresis:	approx. 15 %
Auxiliary Circuit	
Aunilianu valtana II.	AC 000 040 V
Auxiliary voltage U <sub>H</sub> :	AC 220 240 V
Voltage range: Nominal consumption:	0.85 1.1 U <sub>H</sub> approx. 2 VA
Nominal frequency:	45 400 Hz
Nominal frequency.	40 400 112
Output	

Number of contacts provided:2 changeover contacts

Thermal current I <sub>th</sub> : Switching capacity acc. to AC 15	5 A	
NO contact:	5 A / AC 230 V	IEC/EN 60 947-5-1
NC contact: Contact life	2 A / AC 230 V	IEC/EN 60 947-5-1
to AC 15 with 1 A, AC 230V:	5 x 10 <sup>5</sup> operating cycle	es IEC/EN 60 947-5-1
Short circuit strenght max. fuse rating: Mechanical life:	4 A gL > 30 x 10 <sup>6</sup> operating	IEC/EN 60 947-5-1 cycles

#### **General Data**

Nominal operation: Temperature range: Clearance and creepage dista overvoltage category/	Permanent operatior - 20 + 60°C ances	1
pollution degree:	4 kV / 2	IEC 60 664-1
Static discharge (ESD):	8 kV (air discharge)	IEC/EN 61 000-4-2
HF irradiation:	10 V / m	IEC/EN 61 000-4-3
Fast transients: Surges	2 kV	IEC/EN 61 000-4-4
between supply lines:	1 kV	IEC/EN 61 000-4-5
between wire and ground:	2 kV	IEC/EN 61 000-4-5
Radio interference suppression	:Limit value class B	EN 55 011
Degree of protection		
Housing:	IP 40	IEC/EN 60 529
Terminals:	IP 20	IEC/EN 60 529
Housing:	Thermoplast with V0	
	according to UL Sub	ject 94
Vibration resistance:	Amplitude 0.35 mm	
	Frequency 10 55 Hz	
Climate resistance:	20 / 060 / 04	IEC/EN 60 068-1
Terminal designation:	EN 50 005	
Wire connection:	2 x 2.5 mm <sup>2</sup> massive	,
	2 x 1.5 mm <sup>2</sup> strande	d wire with sleeve
	DIN 46 228-1/-2/-3	
Wire fixing:	Screw terminals with s	0
	clamping piece	IEC/EN 60 999-1
Mounting:	DIN rail	IEC/EN 60 715
Net weight		
IN 5880/710:	approx. 190 g	
IN 5880/711:	approx. 250 g	
IP 5880/711:	approx. 350 g	
Dimensions		

Width x height x depth IN 5880/710, IN 5880/711: IP 5880/711:

52.5 x 90 x 59 mm 70 x 90 x 59 mm

## Standard Type

IN 5880.12/710 AC 220 - 240	V
Article number:	0056739
Article Humber.	
Output:	2 changeover contacts
<ul> <li>Auxiliary voltage LL ;</li> </ul>	AC 220 240 V
<ul> <li>Auxiliary voltage U<sub>H</sub>:</li> </ul>	AC 220 240 V
<ul> <li>Overall width:</li> </ul>	52.5 mm
• Adjustable alarm value R <sub>AI</sub> :	50 500 kO
	50 500 K22


## Variant

IN 5880/711:


IP 5880/711:

with 11-stage LED chain for indication of the current insulation value with 11-stage LED chain for indication of the current insulation value, in addition with connection for test and indicator panel UP 5862

# Ordering Example

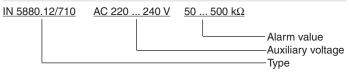


**Connection Example** 

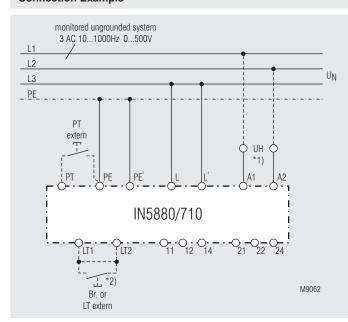

Monitoring of a 3-phase IT power system


## **Connection Examples**

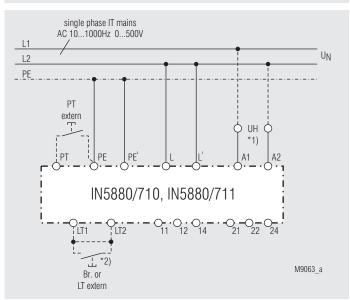

Monitoring of a single phase IT power system

- \*1) The auxiliary voltage U<sub>H</sub> (A1 A2) can also be drawn from the power system to be monitored. However, the voltage range of the auxiliary voltage must be taken into consideration.
  \*2) With jumper LT1 LT2: No storing of error message
  - (hy With jumper LT1 – LT2: Sto

(hysteresis behavior) Storing of error message; can be deleted by pressing the Delete (Reset) key LT

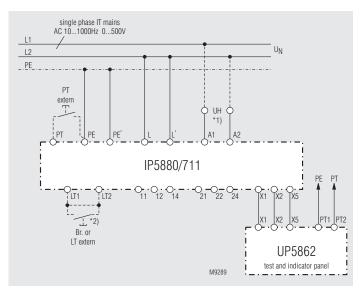

#### Accessories

#### Test and indicator panel UP 5862

For insulation monitors in medically used rooms according to IEC 60 364-7-710, DIN VDE 0100-710


- Isolations Überwachung En Profen Profen Loschen
- to mount in flush device boxes ø 60 mm, 35 mm deep;
- test button to check the function of the device
- with green LED to indicate operation
- reset button for audible alarmwith yellow LED to monitor insulation
- with yellow LED to monitor insul failure

Max. wire length to IN / IP 5880 at wire cross section A = 0.5 mm<sup>2</sup>: 500 m at wire cross section A = 1.5 mm<sup>2</sup>: 1000 m

Dimensions (width x height): 80 x 80 mm Article number: 0041706


#### Flush mounting kit

Order reference: KU 4087-150/005659

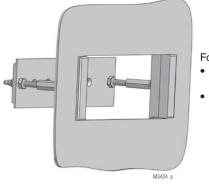

- For universal use with:I-series devices of
  - 17,5 to 105 mm width
- easy mounting

# Mounting kit for surface mounting KU 4087-100

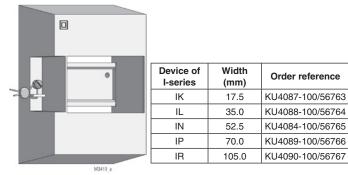

E. DOLD & SÖHNE KG • D-78114 Furtwangen • POBox 1251 • Telephone (+49) 77 23 / 654-0 • Telefax (+49) 77 23 / 654-356